




DOUBLE DOOR SEAL

- 1) Close the doors to be sealed. From the outside measure the visible distance between the top and bottom of the door.
- 2) Subtract 5mm (for clearance) from this length and cut the Double Door Seal to this size.
- 3) Attach the seal to one of the doors as shown below, ensuring that when the doors are closed the doors are sealed.

FOR INWARD OPENING DOORS

OUTSIDE

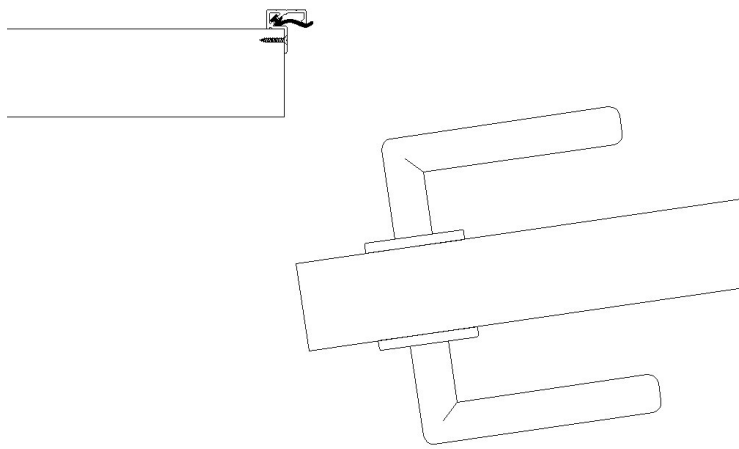

FOR OUTWARD OPENING DOORS

OUTSIDE

