



## INTERNAL & EXTERNAL SLEEVED LETTERBOX

- 1) Place the letterbox in the opening of the door, ensuring that the seal is between the outside face of the door and the letterbox.
- 2) Screw the 2 parts of the letterbox together as shown below.

