




## V- SEAL DRAUGHT EXCLUDER

### Please read all instructions before attempting to fit V SEAL


1. Make sure all surfaces upon which the V-seal is to be fitted are clean, dry and free from dust, grease and flaking paint. If necessary rub the surfaces with white sprit and dry off thoroughly.
2. Peel off approx 150mm of the backing tape to expose the self adhesive surface and working from the top, adhere the seal to the vertical frame of the door or window, in such a position that the seal can be compressed by closing the door or window. [see diagram for correct positioning of the seal].

#### Correct fitting to sides of door frame.

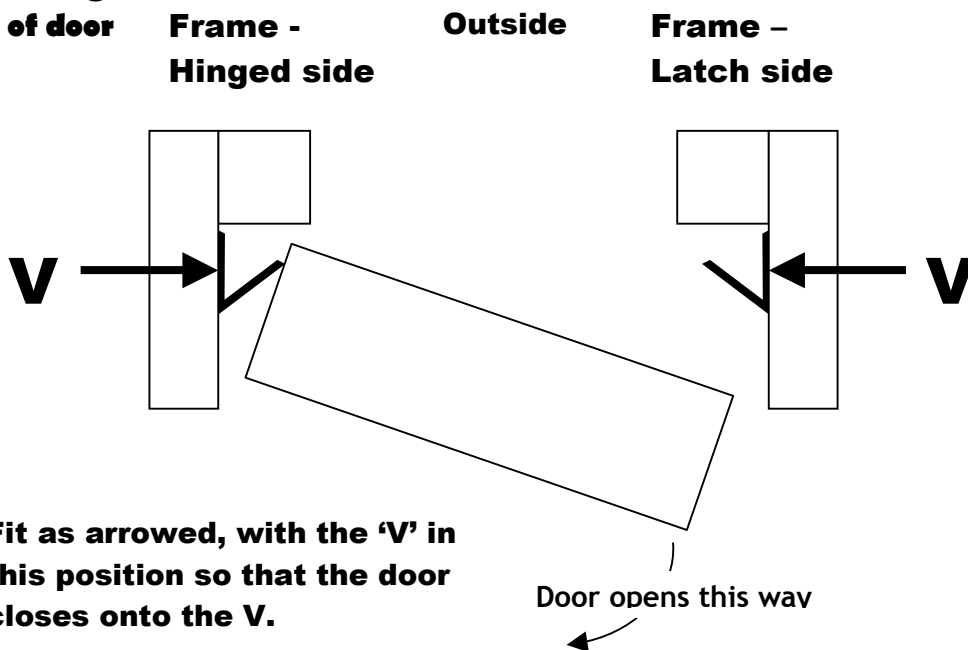

#### Correct fitting to top of door frame

Door closes this way

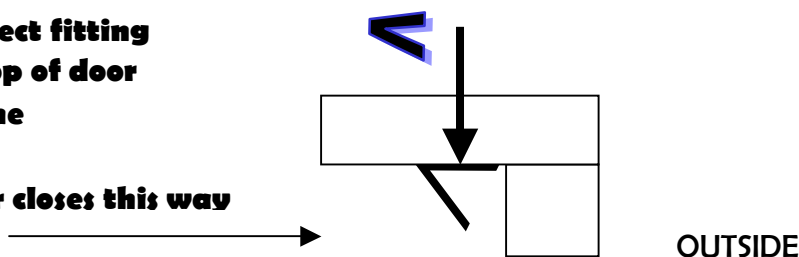

3. Continue to remove backing paper working downwards, and smooth down to ensure seal is properly affixed to the frame. Cut to exact length using scissors. Repeat for the other vertical side and the frame at the top of the door [if used on a window the seal can be affixed to the bottom of the frame].

#### IMPORTANT

4. Once firmly attached fold the V seal outwards along the centre crease to form a 'V' shape seal.